



XL6 Brace Bar Installation Instructions

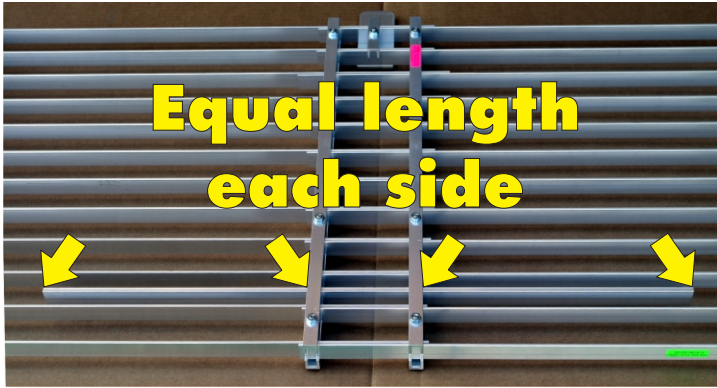


STEP 1: After grate has been adjusted, slide brace bar so that equal amounts extend on either side of center supports. Be sure to re-tighten any bolts loosened.

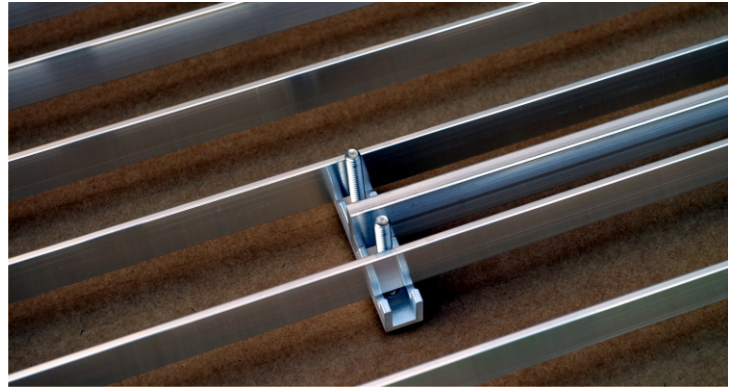


STEP 2: Place bolts through clip and slide into place at end of brace bar.



STEP 3: Place a second clip over bolts making sure that slots line up with brace bar and grate loops.

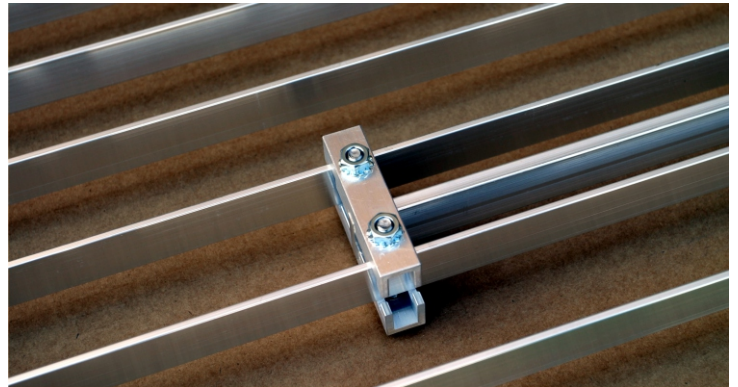

STEP 4: Install and tighten nuts.

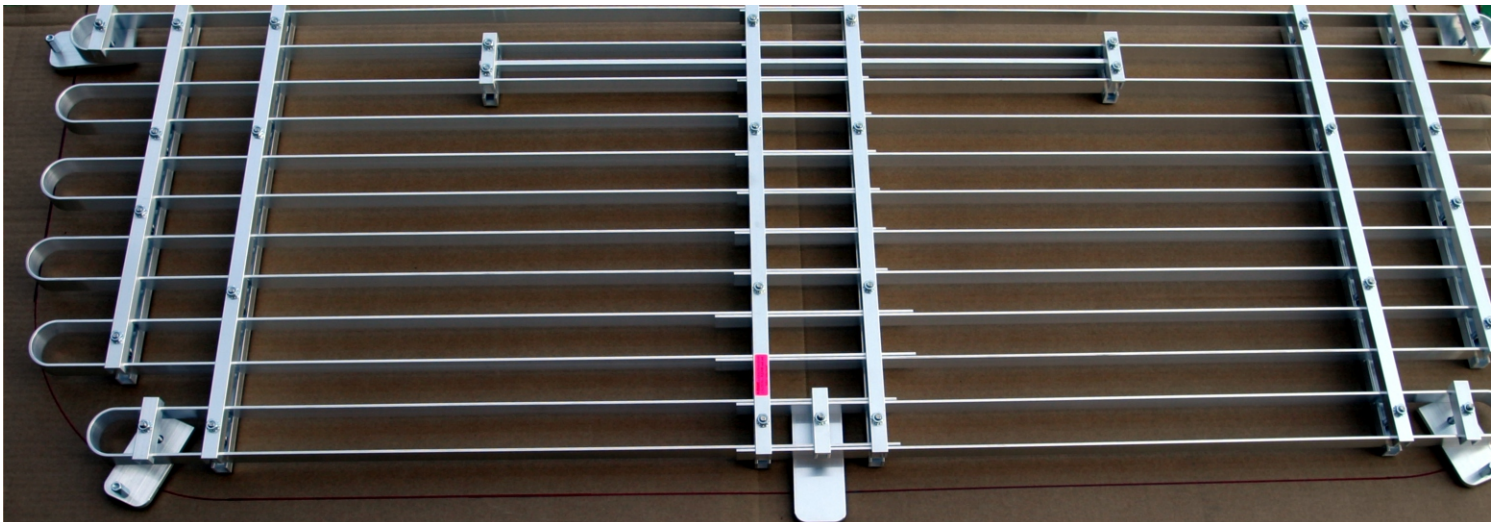

STEP 5: Repeat clip installation on other end of brace bar.

If you have any questions or problems - contact:

ADJUST-A-GRATE, INC.

Denver Metro Area: 303-278-6262

Outside Metro Area: 1-888-877-4728