

# ADJUST-A-GRATE

## Security Kit Installation Instructions



Fig. 1



Fig. 2

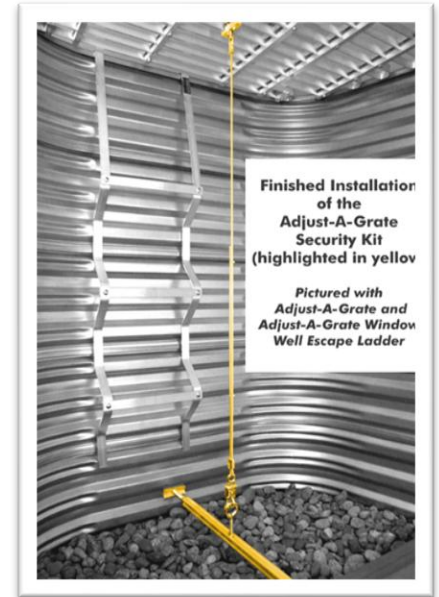


Fig. 3

Parts list on outside box label. Recommended tools: Adjustable wrench and 1/8" Allen wrench.

**STEP 1** (see Fig. 1): Attach **(A) 6 ft. cable with clamp unit** to installed grate by removing nuts and connecting the clamp unit to the center of the grate. Re-attach and tighten the removed nuts. When the cable is properly attached it will hang down in the center of the window well.

**STEP 2** (see Fig. 2): Ensure that the serrated end of **(B) Anchor bar** is towards the house and make sure the center hole is facing up. Insert **(C) Foot** into the non-serrated end of **(B) Anchor bar**. Position **(B) Anchor bar** to the center of the window well, below the window opening, and perpendicular to the house. For a corrugated metal window well, the rectangular end of **(C) Foot** should be positioned horizontally between two ribs. Press the rectangular end of **(C) Foot** against the well keeping the bar level. Turn the large nut on **(C) Foot** counterclockwise to press and tighten the opposite serrated end of **(B) Anchor bar** to the foundation wall.

**STEP 3** (see Fig. 3): Remove the bottom nut and washer from **(D) Eyebolt**. Insert **(D) Eyebolt** into the center hole of **(B) Anchor bar** with the eye hook pointed up and facing the window. Reattach the bottom nut and washer on to **(D) Eyebolt** and tighten. Slide sleeve on **(E) Quick release panic snap** in the direction of the arrow to release the bottom hook. With the red arrow facing the window, insert the bottom hook of **(E) Quick release panic snap** into **(D) Eyebolt** by lifting the sleeve to lock the bottom hook.

**STEP 4**: Insert the cable from Step 1 through one side of **(F) Cable clamp**, through the top opening in **(E) Quick release panic snap**, and back up through the other side of **(F) Cable clamp**. Pull cable snug and tighten the clamp set screws with 1/8" Allen wrench. If necessary, adjust **(D) Eyebolt** down by putting tension on cable and loosening the top nut then tightening the bottom nut. Too much tension will make it difficult to re-lock **(E) Quick release panic snap**. The loose end of the cable can be attached to the main cable with **(G) Zip tie**.

To adapt the security kit to other grates, visit the info page on [www.grate.com](http://www.grate.com) for instructions.